



**Valco Instruments Co. Inc.**

## **Dynacalibrator Model 340 Instruction Manual**

*Manufactured by:*

**Valco Instruments Co. Inc.**  
8300 Waterbury  
Houston, TX 77055

Rev 9/13

*North America, South America, and Australia/Oceania contact:*



**Valco Instruments Co. Inc.**  
800 · 367 · 8424   sales  
713 · 688 · 9345   tech  
713 · 688 · 8106   fax  
[valco@vici.com](mailto:valco@vici.com)

*Europe, Asia, and Africa contact:*



**VICI AG International**  
Schenkon, Switzerland  
Int + 41 · 41 · 925 · 6200   phone  
Int + 41 · 41 · 925 · 6201   fax  
[info@vici.ch](mailto:info@vici.ch)

## Symbols used in this document



Attention



Radiant heat warning



Entanglement warning



Electrical warning

# Table of Contents

---

Introduction	
General Description.....	1
Dynacal® Permeation Devices.....	1
How to Use This Manual.....	1
Basic Design .....	1
Options .....	4
Input Configurations.....	4
Rack Mount Options.....	4
Special Customer Options.....	4
Specifications.....	5
Getting Started .....	6
Initial Receiving Inspection/Check.....	6
Unpacking the Dynacalibrator .....	6
Concealed Damage .....	7
Unit Location.....	8
Permeation Device Conditioning .....	8
Rear Panel Connections .....	9
Supply Inlet.....	9
Carrier/Dilution Inlets.....	10
Bypass Loops.....	11
Stream, Span, and Zero Outlets .....	11
Overflow and Chamber Vents .....	11
Front Panel Controls and Indicators .....	12
Main Power Switch.....	12
Heater Power Switch .....	12
Permeation Chamber.....	12
Permeation Chamber Flowmeter .....	12
Temperature Readout and Controller .....	12
Dilution Flow Control Valves.....	12
Dilution Flowmeters .....	12
Oven Temperature Limit Thermostat .....	12
Mode Selector Switch and Indicators.....	13
Calculations.....	14
Initial Power Up.....	15
Basic Connections.....	15
Remote Control Connections .....	15
Chamber Temperature .....	15
Setting the Chamber Temperature Manually.....	16
Setting the Chamber Temperature Limit Switch .....	16
Setting the Chamber Temperature via Serial Port (RS-232) .....	17
Installing the Permeation Device(s).....	17
Verifying Operation .....	18
Serial Port Communication .....	20
Setting Up Serial Communication via HyperTerminal®.....	20
Entering Commands .....	24
Analyzer Calibration.....	25
Shutdown Procedure.....	26

## Table of Contents (*continued*)

Advanced Theory of Operation.....	27
Plumbing Configurations.....	27
Configuration 0 .....	28
Configuration 1 .....	28
Configuration 2 .....	29
Configuration 3 .....	29
Configuration 4 .....	29
Configuration 5 .....	31
Electrical Description.....	32
Maintenance .....	33
Instrument Inspection and Cleaning .....	33
Carrier Flow Rate Verification.....	34
Dilution Flowmeter Calibration.....	34
Chamber Temperature Calibration .....	35
Troubleshooting .....	36
Electrical Troubleshooting .....	36
Pneumatic Troubleshooting.....	36
Leak Detection.....	36
Fluid Method.....	36
Component Isolation Method .....	37
Other Pneumatic Issues.....	38
Model Number Breakdown .....	39
Warranty .....	40



If this equipment is used outside manufacturers' specification the protection provided by the equipment may be impaired.

---

# Introduction

## General Description

VICI Metronics Dynacalibrators® use Dynacal® permeation devices to generate the precise gas concentrations necessary for calibrating air pollution analyzers, monitors, and other instruments that measure gas concentrations in the parts-per-million range and lower.

Dynacalibrators are available in three models, each with a large variety of optional features to fit a wide range of calibration requirements. All critical factors, such as permeation rates, gas flow rates, and permeation chamber temperatures are calibrated against standards traceable to the National Institute of Standards and Technologies.

Model 340 specifications are listed on page 5.

## Dynacal Permeation Devices

Metronics Dynacal permeation devices are the simplest and most reliable method for supplying a source of trace quantities of various gases. They can accommodate virtually any requirement for generating low concentrations of gases. Permeation rates from thousands of ng/min down to fractional parts of a ng/min are possible. The devices can be supplied filled with any one of hundreds of different compounds, both organic and inorganic.

## How to Use This Manual

This manual provides installation, operation, and maintenance information for all configurations of the Model 340. The identification tag on the rear panel of every Dynacalibrator is stamped with the unit's complete model number, which reflects the exact unit configuration. A chart on the last page of the manual explains the model numbers.

## Basic Design


The Model 340 contains two calibrated gas regulating systems – the carrier system and the dilution system. The fixed flow carrier gas system includes a permeation chamber containing the permeation device. The temperature of the chamber, which controls the permeation rate of the calibration gas from the permeation device, is set and monitored at the front panel. The carrier stream is pumped through the chamber to pick up the calibration gas and is then fed on to a mixing tee. The chamber temperature is adjusted from 30°C (or 2°C above ambient, whichever is higher) to 110°C.

The dilution gas stream flows through an adjustable valve and a flowmeter to the mixing tee. Front panel access to the valve and flowmeter permits the user to accurately set the dilution stream flow rate to the mixing tee, thereby setting the concentration of calibration gas at the outlet port of the calibrator.

As indicated in **Figure 1**, the carrier stream passes through scrubber #1 and 30-micron line filter LF1 to the differential pressure regulator DPR1. The scrubber contains specially-activated charcoal designed for broad-based scrubbing action. This scrubbing medium is particularly effective in removing sulfur dioxide and other sulfur compounds.

The differential pressure regulator and carrier flow restrictor FR1 together provide a highly stable carrier stream flow rate to the permeation chamber. The standard carrier flow restrictor consists of a disk with a 0.006" diameter orifice. The flow rate through the orifice is a function of the pressure differential across it and this differential is maintained at 3.2 psi by DPR1.

The output of the permeation chamber is fed to a mixing tee, where the calibrated dilution stream is added to set the final concentration. The combined stream is then fed through another tee to the rear panel overflow vent and span outlet.

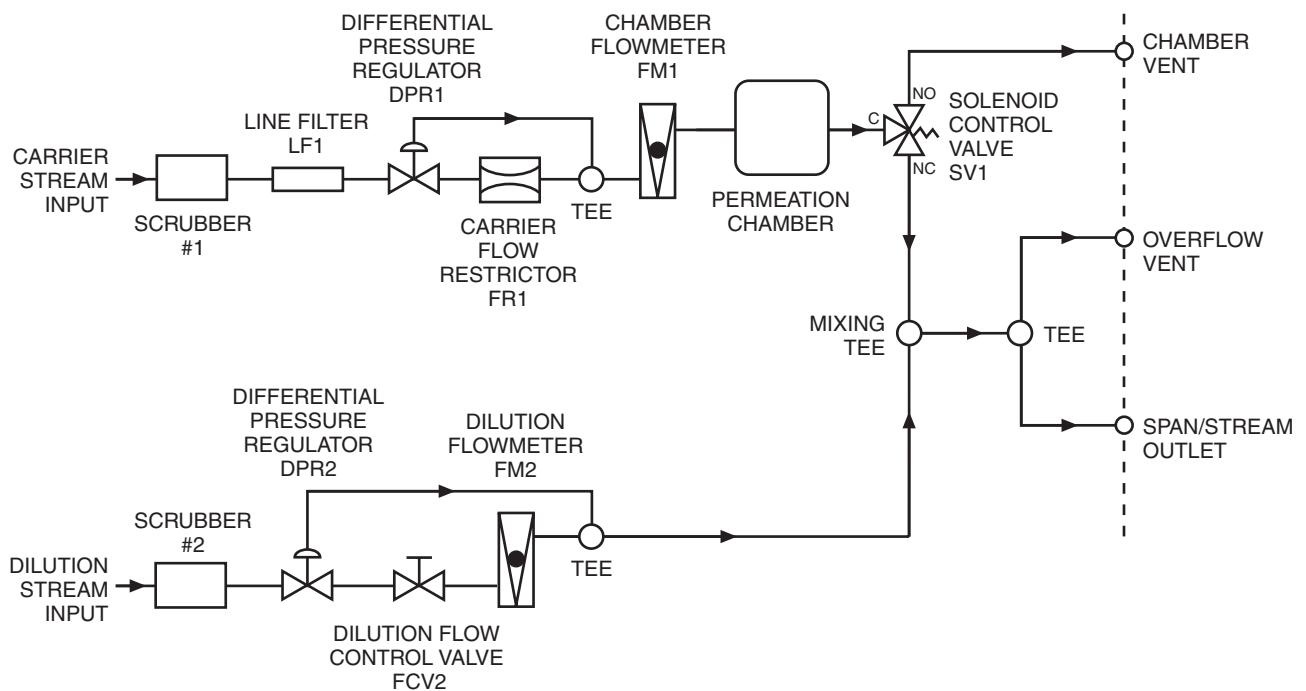

**Figure 1:** Model 340 plumbing schematic

For those analyzers sensitive to sample feed pressure, the overflow vent dumps excess calibration gas to ensure that the analyzers receive span gas at near atmospheric pressure. The overflow vent is usually left open, but can be plumbed to an external exhaust point. Any exhaust plumbing must be sized so as not to increase pressure into the analyzer under calibration.

Referring again to **Figure 1**, note that the dilution stream passes through scrubber #2 and feeds into differential pressure regulator DPR2. The differential pressure regulator maintains a fixed pressure differential across dilution flow control valve FCV2 and dilution flowmeter FM2.


The flow rate through the flowmeter needle valve is a function of the differential pressure across it and the setting of the dilution flow control valve. This differential is maintained at 3.2 psi by DPR2. The needle valve is adjustable at the front panel. The calibrated output of the dilution flowmeter mixes with the permeation chamber output to provide the final output concentration.

When the non-pressurized internal pump option is included, the rear-panel zero outlet port is internally connected to a passive scrubber which functions identically to those previously described. In operation, the zero outlet is plumbed either to the analyzer sample intake port or to the zero air intake port, so that analyzer suction provides flow through the scrubber.

The Model 340 features zero air capability for easy two-point calibration. It can be remotely switched between the zero air and span output modes. A front panel switch permits selection of the ZERO, SPAN, or REMOTE mode. In the ZERO mode, a two position valve directs the permeation chamber output to an exhaust vent. Only the dilution stream passes through the mixing tee to the outlet port, permitting the analyzer to be calibrated at its zero point.

In the REMOTE mode, the Model 340 can be used to calibrate a remote analyzer equipped with a separate calibrate input port and remote control capability.

**Figure 2** illustrates this application. The calibrator is initially set up and plumbed to the analyzer at the remote monitoring station. The operator may then periodically check the calibration of the analyzer by simply switching it to the calibrate mode and selecting the ZERO and SPAN outputs of the calibrator, or the calibrator may be automatically sequenced at fixed time intervals. The calibrator requires only a single contact closure to switch between the two modes.

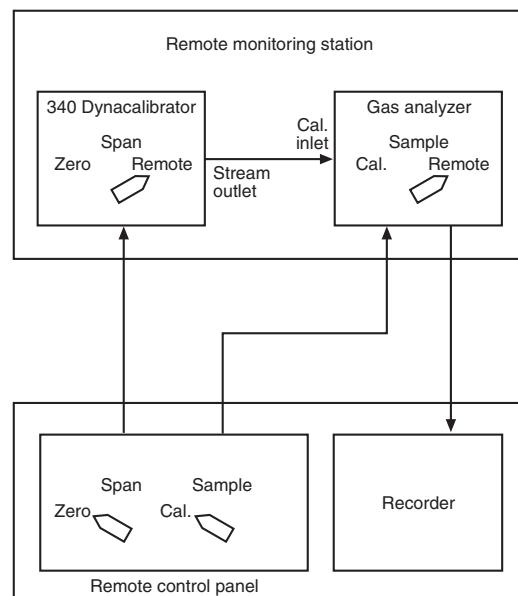

**Figure 2:** Model 340 in remote mode

## Options

The following paragraphs provide general information on each, with more detailed information found in "Advanced Theory of Operation" on page 27.

### **Input Configurations**

There are six different input plumbing configurations available. The units may be equipped with or without an internal pump. Units without internal pumps can be supplied with one or two gas supply inlet ports (carrier and dilution). Models with pumps are available with gas stream bypasses for either the dilution or carrier stream or both. (Units without internal pumps do not require gas stream bypasses.) Those with internal pumps have a single inlet port supplying the pump, the outlet of which is split into carrier and dilution streams. The gas stream bypasses on these units are also downstream from the pump, permitting the user to connect external scrubbers, driers, separate gas supplies, etc. in either or both streams. All models are available with nominal maximum flow capacities from 1 to 20 liters per minute.

### **Rack Mount Options**

The standard Dynacalibrator is packaged in a free-standing case with carrying handles, for bench use. The units may also be packaged for mounting in a standard 19" equipment rack.

### **Special Customer Options**

Special options, identified by the "S" at the end of the model number, are not covered in this basic manual. If your Dynacalibrator is equipped with a special option, the required additional information will be found on the Special Option Sheets in the back of this manual. The Special Option Sheets carry the serial number of the Dynacalibrator to which they apply.

## Specifications

### Operational

Output concentration range .....	Fractional ppb to hundreds of ppm
Carrier flow rate (nominal) .....	80 and 175 sccm, factory set and specified per unit
Dilution flow rate (nominal) .....	1,2,5,10,15, and 20 L/min full scale
Dilution flowmeter accuracy .....	+1% at each major flow setting above 3 +3% at 1,2, and 3 at 25°C ambient,
Permeation chamber .....	50% relative humidity and 760 mm Hg
Temperature range .....	30°C to 110°C, or 2°C above ambient
Temperature setpoint accuracy .....	+0.1°C (N.I.S.T. traceable) at any integral temperature setting at or above 25°C
Temperature setpoint repeatability.....	+0.05°C at any fixed ambient temperature
Temperature equilibrium time (nominal).....	Standard temperature range: max 1.5 hour Expanded temperature range: max 3 hour
Size .....	Accepts devices up to 23.5 cm (9.25") long x 1.6 cm (0.62") diameter
Operational Modes .....	Zero, Span, and Remote
Remote Mode Control Inputs .....	Contact closures capable of handling a 24 VAC, 12W inductive load
Operating Duty Cycle .....	Continuous

### Environmental

Operating noise emission (at 3 feet).....	55 to 60 dBA for units with internal pumps 45 to 50 dBA for units without
Ambient operating temperature .....	20°C to 35°C
Operating humidity .....	0 - 95% relative humidity
Storage temperature .....	10°C to 40°C
Storage humidity .....	0 - 50% relative humidity
Operating altitude .....	10,000' MSL

### Physical characteristics

Dimensions (standard case) .....	43.2 cm (17") wide x 60.3 cm (23.75") deep x 26.7 cm (10.5") high
Weight .....	
Without internal pump .....	20.0 kg (44 lbs)
With internal pump .....	25.4 kg (56 lbs)

### Power requirements

Voltage and frequency .....	24 VDC
Power consumption .....	
Without internal pump .....	65 W
With internal pump .....	110 W
Power cord .....	10' power cord, standard 3-prong, U-ground plug

### Options

Basic plumbing .....	Internal pump Second gas supply inlet Carrier stream bypass Dilution stream bypass
Gas flow capacity .....	0.4 - 1 liter/min 0.4 - 2 liters/min 0.4 - 5 liters/min 0.4 - 10 liters/min 0.4 - 15 liters/min 0.4 - 20 liters/min

## Getting Started

Every Dynacalibrator is completely calibrated, thoroughly tested and inspected, and carefully packed prior to shipment. The carrier has assumed responsibility for its safe delivery upon acceptance of the shipment.

### Initial Receiving Inspection/Check

On receipt of your unit, before signing the waybill and releasing the carrier's agent, inspect the shipment for the following:

1. The number of cartons received tallies with that on the waybill.
2. The weight of the shipment agrees with that on the waybill.
3. There is no visible evidence of damage to the shipment or its containers.

Any discrepancies to the above must be clearly described on the waybill and signed by the carrier's agent. Failure to adequately describe such external evidence of loss or damage may result in the carrier refusing to honor any subsequent claim.


### Unpacking the Dynacalibrator

After the initial receiving inspection and check, the Dynacalibrator may be unpacked. A carefully sized and mated pair of shipping cartons have been designed to ensure against any damage to the Dynacalibrator while it is in transit. Use the following procedures to remove the instrument from the packaging, referring to **Figure 3** as necessary.



**Save all the packing materials – both cartons, the eight corner blocks, and the two inner carton supports – for any future shipment of the Dynacalibrator.**

1. Neatly slit the shipping tape along the edges of the flaps on the top of the carton with a knife. Do not try to pull or tear the tape.
2. Open the outer carton and remove the four corner blocks on top of the inner carton.
3. Neatly slit the shipping tape along the edges of the flaps on the top of the inner carton with a knife. Take care to penetrate the tape with the knife only far enough to cut it. The Dynacalibrator is directly beneath the flaps.
4. Carefully lift the Dynacalibrator out of the inner carton.

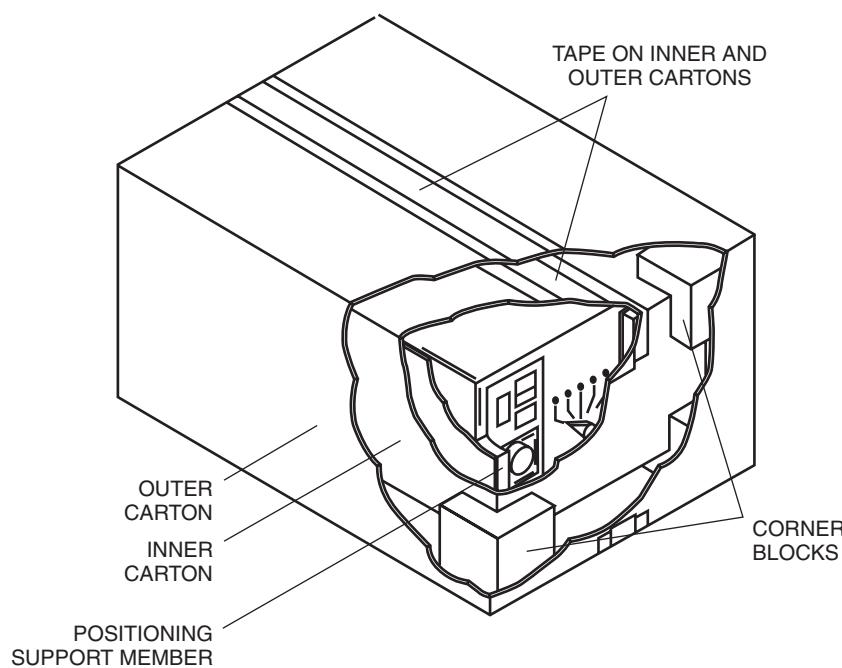

**Figure 3:** Dynacalibrator packaging

## Concealed Damage

Concealed damage is damage which is not apparent until after the equipment has been unpacked and examined or tested. In the event that concealed damage is discovered, a written request for inspection must be forwarded to the carrier's agent within 15 days of the delivery date. All cartons and packing materials must be kept intact for the inspection. Delay in submitting the inspection request or destroying the packing materials may give grounds for refusal of any claim.

After inspection, the carrier's agent will usually request the return of the equipment to VICI for inspection and repair. When this work is completed, the equipment will be returned to you with an invoice itemizing charges for all repairs. This invoice will become part of your claim to the carrier.

In the case of shipments made F.O.B. destination, VICI will, at your request, handle the filing of damage claims with the carrier provided an acceptable inspection report from the carrier is furnished to VICI. If, however, the claim is disallowed through no fault of VICI, repair charges will be billed directly to you.



**You must unpack and fully inspect the equipment and file a written request for inspection with the carrier within 15 days of delivery to ensure claim satisfaction in the event of concealed damage.**

## Unit Location

In general, the Dynacalibrator should be as close as possible to the analyzer to be calibrated, as long as:

- the ambient temperature is at least 2°C below the selected operating temperature of the permeation chamber.
- ambient temperature variations are minimal.
- exposure to precipitation and condensation is minimized.
- ambient particulate levels are minimal.  
(In the event that dust is prevalent, the unit should be equipped with a Metronics Particulate Filter Assembly.)
- air flow around the unit's cooling vents and rear panel fan intake is not blocked or restricted, particularly for the rack-mounted units.
- it is on a level surface, to prevent errors in flow determination caused by a non-vertical flowmeter



**When the Dynacalibrator is installed in an instrument rack, the user must make certain that the overall rack ventilation/cooling is adequate.**

A bench-mounted Dynacalibrator should be placed on a firm horizontal surface – preferably the same surface as the analyzer to be calibrated. A rack-mounted enclosure in a mobile installation (van, aircraft, etc.) requires additional mechanical support between the rack and the rear of the enclosure. This additional support is not needed for slide-mounted enclosures.

Once the Dynacalibrator has been unpacked and a location selected, check the packing slip included with the shipment to verify that all the ancillary parts (forceps, etc.) are available. In the event of a discrepancy, please notify VICI immediately.

## Permeation Device Conditioning

Dynacal permeation devices must be conditioned prior to their use in the Dynacalibrator. Proper conditioning ensures that the device performs at its specified mass permeation rate and accuracy.

Conditioning is accomplished primarily by heating the device for a specified time period in a temperature-controlled environment (at the intended operating temperature  $\pm 1^\circ\text{C}$ ) through which there is a steady purge of dry gas at a minimum of 80 cc/min.

Since conditioning for each specific device is a function of a variety of factors, inflexible rules or recommendations cannot be included here. Contact VICI Metronics for conditioning information for your permeation devices.

## Rear Panel Connections

Remove all shipping caps and shipping plugs from the rear panel bulkhead fittings. All these hardware items should be saved for reuse if the Dynacalibrator must be stored or returned to VICI.

The connections available on the rear panel of the different models and configurations are listed in **Table 1**. If a plumbing connection is required, the block under the fitting heading is marked with an "X"; if the connection is optional, the block is marked with an "O"; if there is no connection, the block is blank.

Fitting locations are identical for all configurations. Fitting holes which are not used are equipped with blank caps. All connections are clearly marked and easily identified.

Model	Inlets				Outlets			Bypasses		Vents	
	Sample	Supply	Carrier	Dilution	Stream	Span	Zero	Carrier	Dilution	Overflow	Chamber
340-0X		X			X					O	O
340-1X			X	X	X					O	O
340-2X		O			X					O	O
340-3X		O	O		X			X		O	O
340-4X		O		O	X				X	O	O
340-5X		O	O	O	X			X	X	O	O
340-0X-Z		X			X		X			O	O
340-1X-Z			X	X	X		X			O	O
340-2X-Z		O			X		X			O	O
340-3X-Z		O	O		X		X	X		O	O
340-4X-Z		O		O	X		X		X	O	O
340-5X-Z		O	O	O	X		X	X	X	O	O

**Table 1:** Dynacalibrator Model 340 rear panel connections

X = Required connection

O = Optional connection

blank = No connection

### Supply Inlet

All Dynacalibrators except those with -1X input configurations (separate carrier and dilution inlet ports) are equipped with a supply inlet fitting. Those with -0X input configurations (no internal pump) must have the supply inlet connected to an external pressurized source of carrier and dilution gas, such as an external pump, a cylinder of compressed gas, etc. The most commonly used gas is dry air; however, dry nitrogen or any other comparably inert gas including ambient air may also be used.

**The pressure of the external gas source connected to the supply inlet must be at least 10 psig but no more than 30 psig. High pressure pumps and gas cylinders are potentially very dangerous. Extreme care must be exercised when making or breaking connections between the Dynacalibrator and external gas sources.**



On all units with an internal pump, the supply inlet port is internally connected directly to the suction side of the pump. Since the output of the pump is equipped with a particulate filter and activated-charcoal scrubbers, the supply inlet port should normally be left unconnected, completely open, and clear of any obstructions, except as noted below for dusty environments.

If you need to alter the carrier and/or dilution streams by adding filters, scrubbers, dehydrators, etc., the recommended method is to connect these components in series with the bypass loops as described on the next page. If your unit is not equipped with bypass loops, you must consider the following before altering the stream into the supply inlet:

- If the unit or device connected to the supply inlet port generates a gas-flow-related pressure drop, thereby partially “starving” the pump (that is, increasing the vacuum at the pump’s suction port), the maximum flow output capability of the Dynacalibrator will likely be diminished.
- If the unit or device connected to the supply inlet is equipped with a supplementary pump providing an altered gas flow to the Dynacalibrator pump’s suction at a pressure greater than 0 psig, the life of the pump may be decreased. Increasing the suction pressure of the Dynacalibrator pump will not increase its output flow capability.

Whenever a Dynacalibrator is to be operated in an environment that has significant concentrations of dust or other particulate matter, we recommend a VICI Metronics Particulate Filter Assembly (PFA) connected to the supply inlet port. The disposable filter inside the PFA has been selected for its very low pressure drop. Use of a PFA will not diminish the output flow of the Dynacalibrator pump. The disposable filter part number is FC.



**VICI recommends that Dynacalibrators equipped with internal pumps be operated either with their SUPPLY INLET port completely open and clear of obstructions or fitted with a low pressure drop VICI Metronics Particulate Filter Assembly.**

---

### Carrier/Dilution Inlets

All Dynacalibrators with input configurations -1X, -3X, -4X and -5X have a carrier inlet and/or a dilution inlet. The -1X configuration does not have an internal pump, so a source of pressurized gas must be connected to its carrier inlet and its dilution inlet. On the remaining three input configurations, these inlets are part of the gas stream bypass loops, discussed in a later paragraph. However, the bypass loops may be left disconnected, and since they are downstream from the internal pump, external pressurized gas sources may be connected to the dilution inlet and/or the carrier inlet. The most commonly used gas is dry air; however, dry nitrogen or any other comparably inert gas including ambient air may also be used.



**CAUTION: Externally supplied pressurized gas sources MUST be limited to a pressure range of 10 psig minimum to 16 psig maximum at these inlets.**

---

### Bypass Loops

Only those Dynacalibrators with internal pumps are equipped with fittings for bypass loops in either or both the carrier and dilution streams (input configurations -3X, -4X and -5X). The fittings – labeled CARRIER OUTLET, CARRIER INLET, DILUTION OUTLET, and DILUTION INLET – are downstream from the pump, so the loops must be completed in order for the internal pump to be used. The purpose of the loops is to expedite the installation of external filters, scrubbers, dehydrators, etc. into the two internal streams before each is mixed with the trace gas. All plumbing should be as short as possible, and the devices should not restrict the flow in either stream below their normal operating rates. If a separate gas supply is connected to either inlet, the input pressure should be between 5 and 16 psig, and the companion outlet should be capped.

If external devices are not required, then the outlet ports must be directly plumbed to their companion inlet ports.

### Stream, Span, and Zero Outlets

Since the Model 340 can supply zero air as well as span gas from its primary outlet, that outlet is labeled STREAM OUTLET. The stream outlet may be either permanently plumbed to the calibrate input port of an analyzer or temporarily connected to its sample input for calibration, depending on the capabilities of the analyzer.



**NOTE: The span outlet port should be directly connected to the analyzer input with a minimum length of tubing. Altering the output stream in any manner may affect the concentration of calibration gas in the stream.**

The zero outlet port provides a scrubbed supply of ambient air for a zero point calibration. Since it is not pressurized, the zero outlet requires suction from the analyzer being calibrated.

### Overflow and Chamber Vents

All Dynacalibrators include an overflow vent to dump excess calibration gas, ensuring that analyzers sensitive to sample feed pressure receive zero and span gas at near atmospheric pressure. The overflow vent is therefore usually left open, or plumbed to an external exhaust point with large diameter tubing. External devices (filters, etc.) or tubing with too small a diameter on the overflow vent may cause an undesirable increase of pressure at the analyzer's input.

The Model 340 is also equipped with a chamber vent. The chamber vent dumps calibration gas from the permeation chamber when these models are in any mode other than SPAN / SPAN 1 / SPAN 2. In the ZERO mode, the dilution stream becomes the zero air supply.

## Front Panel Controls and Indicators

The section entitled "Advanced Theory of Operation" beginning on page 27 includes more detailed information on the interrelation of the front-panel controls and indicators with the internal pneumatic and electrical flow of the units.

### **MAIN POWER** switch, indicator, and circuit breaker

The push-button switch provides primary power to all circuits. The LED indicator lights when main power is on. A 6 amp circuit breaker is installed in the main primary power input line to all circuits.

### **HEATER POWER** switch, indicator, and circuit breaker

The push-button switch provides primary power to the heater circuits when the main power switch is on. The LED indicator lights when heater power is on. A 4 amp circuit breaker is installed in the primary power line to the permeation chamber heater circuits.

### **PERMEATION CHAMBER**

This is the chamber which holds the permeation devices. A tool is provided to rotate the panel lock screw 90° counterclockwise to unlock the cap.

### **PERMEATION CHAMBER FLOWMETER**

A ball float and gauge in the carrier stream immediately preceding the chamber indicates relative carrier flow. The actual carrier flow is set at the factory. Refer to the calibration sheet at the back of the manual.

### **TEMPERATURE READOUT AND CONTROLLER**

The front panel displays the current chamber temperature and the control status of the instrument, indicated by the PNL and TMP lights. The chamber temperature can be set manually through the controls on the front panel or remotely through RS-232 communication. (*Refer to the chapter entitled "Serial Port Communications" on page 20*). After a temperature set point is entered by either method, it is written to memory so that after a power failure the unit will return to the condition previously established.

### **DILUTION FLOW CONTROL VALVE**


Turn the knob to adjust the flow rate of the dilution stream prior to mixing with carrier and trace gas.

### **DILUTION FLOWMETER**

The ball float and gauge indicate the relative dilution stream flow rate into the mixing tee, as set by the dilution flow control knob. Factory calibrated flow rates at integral float settings are provided at the rear of the manual.

### **OVEN TEMPERATURE UPPER LIMIT**

A thermostat provides a safety shutoff at this user-defined setpoint, usually 5 - 10 degrees above the normal run temperature of the permeation device in use. If the oven runs out of control and the temperature goes above this setting, power to the oven heater is shut down and a "PFAIL" indication appears in the temperature display window.

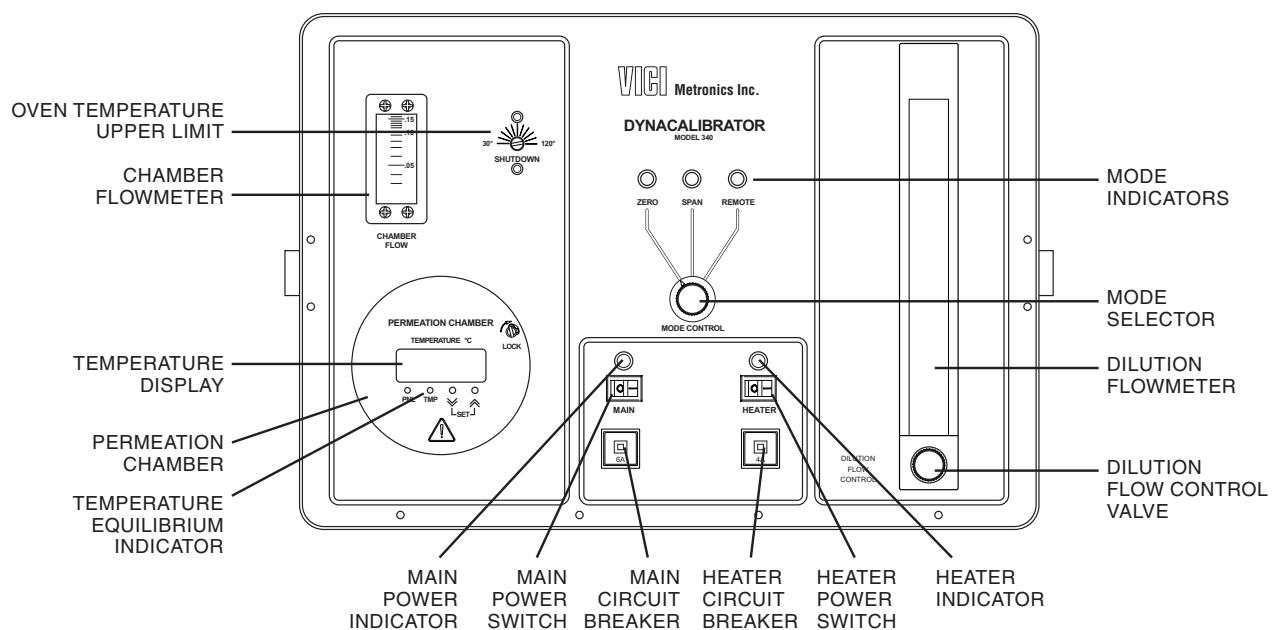

**Figure 4:** Model 340 front panel controls and indicators

#### MODE SELECTOR switch and indicators

The three position switch selects the calibration mode. LEDs indicate the current mode.

- ZERO: The permeation chamber output is dumped out the chamber vent; only the dilution stream exits through the stream outlet to the analyzer.
- SPAN: The permeation chamber output and the dilution stream are mixed and fed through the stream outlet to the analyzer.
- REMOTE: Unit defaults to the ZERO mode. A remote contact closure to rear panel terminals C and V1 will switch the unit to the SPAN mode.

## Calculations

Concentration of the permeant compound in the span outlet stream is inversely proportional to the carrier flow rate through the chamber. It is determined using the following equation:

$$\text{Concentration (ppm)} = \frac{K * P}{F}$$

Where:  $K = 24.45 / \text{molecular weight of gas}$

$P = \text{permeation rate in ng/min (information included with the permeation device documentation)}$

$F = \text{Chamber carrier flow (ml/min)}$

If the permeation rate is known for some reference temperature, the rate at a second temperature can be estimated as follows:

$$\log P = \log P_0 + 0.034 (T - T_0)$$

Where:  $P_0 = \text{Permeation rate at reference temperature } T_0$

$P = \text{New permeation rate at temperature } T$



**Certified devices should be used only at the temperature specified on the certificate.**

**Using any permeation device beyond its recommended temperature range could result in the destruction of the device by explosion and/or changes in the membrane characteristics. If in doubt, contact VICI Metronics with the part number of the device to determine its maximum temperature limit.**

### Sample Calculation

Given:

Permeation rate: 21,000 ng/min  $\text{Cl}_2 @ 30^\circ\text{C}$

Carrier flow: 500 ml/min

Then:

$$\begin{aligned} \text{Concentration (ppm)} &= \frac{K * P}{F} \\ &= \frac{(0.346)(21,000)}{500} = 14.5 \text{ ppm} \end{aligned}$$

For zero reference measurement, remove the permeation device from the chamber.

# Initial Power-Up

---

## Basic Connections

1. Plug the power cable from the main power connector on the rear panel of the calibrator to a 110 VAC power source (220 VAC with Model 340-C).
2. *If you do not have the pump option:*  
Connect the carrier gas source (50 psi maximum pressure) to the carrier inlet on the rear panel.  
*If this is a dual inlet system:*  
Connect appropriate source gases to the carrier inlet and dilution gas inlet. The source must be of sufficient capacity to flow the maximum LPM of the sum of dilution and carrier combined on a single inlet system. The carrier inlet source must be able to provide at least 500 SCCM, and the dilution inlet must be able to source the maximum dilution flow, which may be as high as 20 SLPM.
3. Turn on the calibrator with the main power switch on the front panel. This supplies the fans, the control valves, and the pump, if so equipped.
4. Turn on the heater switch on the front panel. The display on the permeation chamber cover will display a boot sequence, followed by a display of the actual temperature.
5. Connect the span outlet to your instrument.



**Always leak check the entire instrument and all flow connections, particularly if toxic, corrosive, or flammable gas mixes will be generated.**

**Use clean/dry air or N<sub>2</sub> to perform a pressure/decay test to verify the leak integrity of the system before putting it into service.**

## Remote Control Connections

When the front panel mode selector is in the REMOTE position, the operating mode can be selected by providing contact closures between the two rear panel remote control terminals, labeled C (common) and V1. The contact closures must be capable of handling 24 VAC at 0.5 amps into an inductive load.

When C and V1 are open, the Model 340 is in the ZERO mode. When V1 is closed to C, the unit switches to the SPAN mode.

## Chamber Temperature

### Important Chamber Temperature Considerations

- If the chamber temperature exceeds the value set by the mechanical temperature limit switch, the heater will automatically shut down and a warning screen will appear on the touch screen controller.
- When the front panel door is removed, the heater automatically shuts down.
- Always refer to the separate instructions accompanying the permeation tube(s) to make sure that the selected temperature is compatible with the permeation tube(s) being used.

The front panel displays the current chamber temperature and the control status of the instrument, indicated by the PNL and TMP lights. (Refer to **Figure 4** on page 13.) The chamber temperature can be set manually through the controls on the front panel or remotely through RS-232 communication. (Refer to the chapter entitled "Serial Port Communications" on page 20). After a temperature set point is entered by either method, it is written to memory so that after a power failure the unit will return to the condition previously established.

## Setting the Chamber Temperature Manually

To read the current set point: press and hold the  $\wedge$  button.

To read the chassis environment temperature: press and hold the  $\vee$  button.

1. To set the desired temperature, simultaneously press the  $\wedge$  and  $\vee$  buttons, then release them. The PNL light will start flashing, indicating the controller is in the temperature set mode.
2. Use the  $\wedge$  and  $\vee$  buttons to reach the desired temperature set point.  
NOTE: Maximum temperature set point is 110°C; minimum is 30°C.
3. To enter or register the desired temperature set point, simultaneously press the  $\wedge$  and  $\vee$  buttons, then release them. The PNL light will stop flashing. If the set point is not entered, after two minutes the controller will ignore the temperature in Step 2 and revert to its previous status.

To prevent the set point from being accidentally changed, the front panel controls can be disabled with a serial command. (Refer to the section entitled "Serial Port Communications" on page 20.)

## Setting the Oven Temperature Limit

A mechanical thermostat is integrated with the temperature control circuit for fail-safe temperature control. This thermostat should be used to prevent accidental overheating of low temperature permeation devices or permeation devices containing toxic or hazardous chemicals. Overheating can rupture the device or cause an unintended release of chemicals.

The temperature markings on the front panel are approximate ( $\pm 10^\circ\text{C}$ ). For a more accurate setting:

1. Using a flat-tipped screw driver or the tool provided, adjust the setting all the way clockwise.
2. Turn on the Dynacalibrator main power and heater power. Do not install any permeation devices yet.
3. Set the chamber temperature 5°C higher than the desired operating temperature, and wait for temperature equilibrium.
4. After equilibrium, slowly rotate the limit switch counterclockwise until the display reads "PFAIL". (You may hear a faint click.)
5. Turn off the heater power switch and wait 15-20 minutes for the chamber to cool.
6. Turn on the heater power switch and set the chamber operating temperature.



**When PFAIL occurs, the Dynacalibrator must be turned off long enough for the chamber to cool before the power is turned back on.**

## Setting the Chamber Temperature via Serial Port (RS-232)

Refer to the section titled “Serial Port Communications” on page 20.

## Installing the Permeation Device(s)

1. Turn off the heater power switch.
2. With the tool provided, rotate the panel lock screw 90° counterclockwise.
3. Gently pull the front panel assembly out.



**CAUTION: The permeation chamber cap may be warm to touch. If the calibrator has been in use, avoid exposure to gas vapors while opening the chamber cap by using appropriate mitigation and personal protection equipment.**

4. Unscrew the chamber cap with the tool provided.
5. Add or remove the permeation device(s) with the supplied forceps or other tool appropriate to the job.
6. Secure the chamber cap with the tool provided..
7. Run a pressure/decay test to make sure that the chamber cap is leak tight.
8. Reinstall the front panel assembly and rotate the panel lock screw 90° clockwise.
9. Turn on the heater power switch and allow one hour for equilibration. Refer to the separate instructions accompanying the permeation tube to make sure that the selected temperature is compatible with the permeation tube being used.

The Dynacalibrator is ready to be put into service.

### Important Permeation Device Considerations

- If more than one tube is to be used in the oven at the same time, order all the tubes with permeation rates given at the same temperature.
- Certified permeation devices should be used only at the temperature specified on the certificate.
- Using any permeation device beyond its recommended temperature range could result in the destruction of the device by explosion and/or changes in the membrane characteristics. If in doubt, contact VICI Metronics or their authorized representative with the part number of the device to determine its maximum temperature limit.

## Verifying Operation

1. Connect a piece of tubing of the proper length to the span outlet fitting on the rear panel, leaving the analyzer end of the tubing disconnected. Ensure that all other tubing is properly connected.
2. Adjust the permeation chamber temperature to deliver the required rate of permeation.
3. Gently turn the dilution flow control knob clockwise until you encounter the stop indicating the needle valve is fully closed, then open it three turns counterclockwise.



**Never use excessive torque in closing a dilution stream flowmeter needle valve. Close the valve slowly, and only as firmly as is necessary to cause the rotameter float to come to rest on the bottom insert in the flow tube. Excessive torque can damage the needle valve stem and/or seat.**

4. Place the mode selector switch in the ZERO position.
5. Press the main power switch and note that the indicator illuminates.  
(NOTE: In units with the VAC option, first turn power on by pushing the rear panel rocker switch up. After power is turned on at the rear panel, push the main power switch on the front panel.)  
If the unit is equipped with an internal pump, the floats in both flowmeters will rise. If the unit does not have an internal pump, start the external supply and note that the floats rise.



**The pressure of the external gas source connected to the supply must be at least 10 psig but no more than 30 psig. High pressure pumps and gas cylinders are potentially very dangerous. Extreme care must be exercised when making or breaking connections between the Dynacalibrator and external gas sources.**

6. Adjust the dilution flow control valve until the center of the ball float in the dilution flowmeter is at the scale reading from the Flowmeter Calibration Data sheet for the selected dilution flow rate.

**NOTE:** When making a determination of the dilution flow by reading the position of the dilution flowmeter float, the line of sight of the person making the determination *must* (a) pass through the center of the spherical float, and (b) be perpendicular to the axis of the flowmeter containing that float. All readings should be made to the center of the float. *Failing to make readings in this manner can introduce parallax errors.*

7. Check that there is gas flow out of the chamber vent, overflow vent, and stream outlet, and that the outlets are not blocked.
8. Place the mode selector switch in the SPAN position.

9. Check that there is gas flow out of the overflow vent and the stream outlet, but *not* out of the chamber vent.
10. If remote control will be used, turn the mode selector switch to the REMOTE position, and program the unit for ZERO mode.
11. Check that there is gas flow out of the chamber vent, overflow vent, and stream outlet.
12. Program the unit for the SPAN mode.
13. Check that there is gas flow out of the overflow vent and the stream outlet, but *not* out of the chamber vent.
14. Press the heater power switch and note that the indicator illuminates.
15. Let the unit sit under power until the temperature equilibration indicator flashes regularly, about once every second. This usually takes approximately 1.5 hours.
16. After the chamber temperature has reached equilibrium, remove the front panel indicator using the supplied tool, and remove the chamber cap.
17. Use the supplied forceps to insert the preconditioned permeation device in the center of the chamber.
18. Reinstall the chamber cap and door. Make sure that the cap is secure and that the door is in the locked position. Failure to lock the door will disable the function of the temperature control.
19. After appropriate equilibration time, set flows to achieve the output concentration required.

## Serial Port Communication

The Dynacalibrator Model 340 can be monitored and controlled remotely by means of a serial port connection and a terminal emulation program such as HyperTerminal®.


The unit is controlled by entering two-character commands, shown in the table below. Commands may be either upper case or lower case. Parameters enclosed in brackets ([ ]) are optional. Note that for enable/disable commands, the states indicated by an "\*" are the defaults at power-up. Only the altered set point temperature and function coefficients are retained when power is off and restored at power-up.

Command	Meaning
DC[ [=] n ]	Show/set decimation count <i>(Data logging rate, in seconds)</i>
L+	Start data logging <i>(Log data at the interval set by the decimation count: DC=1 sets a one second interval)</i>
L-	Stop data logging*
P+	Enable front panel control*
P-	Disable front panel control <i>(Prevent set point from being changed with panel controls)</i>
SC	Show coefficients
TE	Read environment temperature
TR	Read controlled temperature
TS[ [=] n ]	Show/set temperature setpoint
VR	Show firmware version
??	Display the list of available commands

\* Factory defaults, reset at start-up

### Setting Up Serial Communication via HyperTerminal®


1. To open HyperTerminal in Windows®, click Start > Programs > Accessories > Communications > HyperTerminal. The following screen will appear:

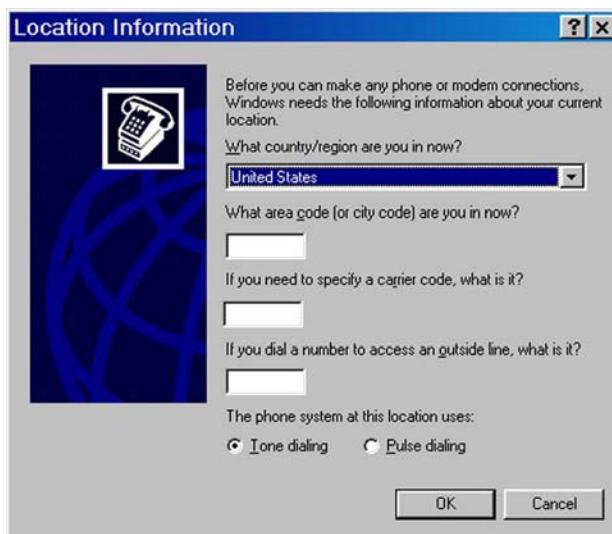

2. Click "Cancel." Since no modem is involved, this information is not necessary.  
The following screen will appear:




3. Click "OK," which reveals the next screen:

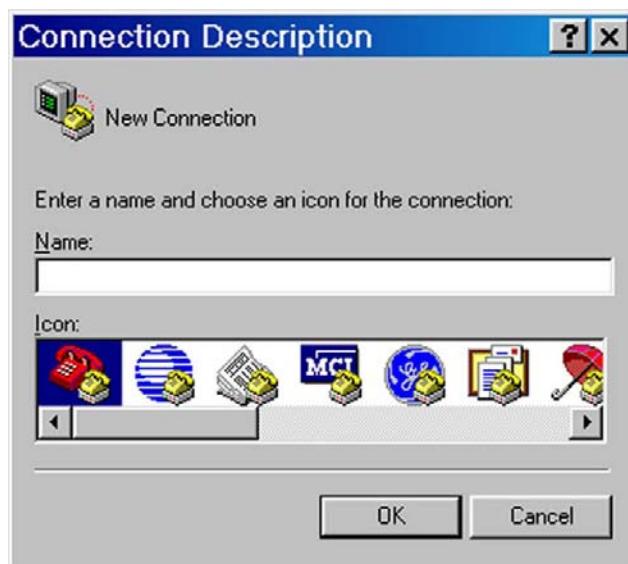

4. Enter a name, such as "dyna340," and select an icon to associate with the file.  
Then click "OK".
5. If necessary, click through the warning screens again to get to this screen:




6. Select the appropriate COM port and click "OK" to bring up this screen:

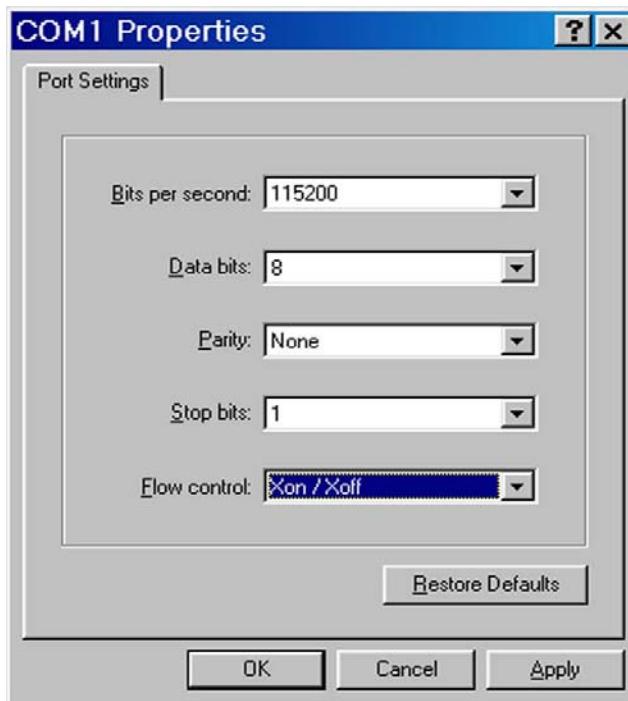


7. Set the port parameters as indicated above, and click "OK".

8. Now we are at the dyna340 HyperTerminal screen (below). Select "File" then "Properties":




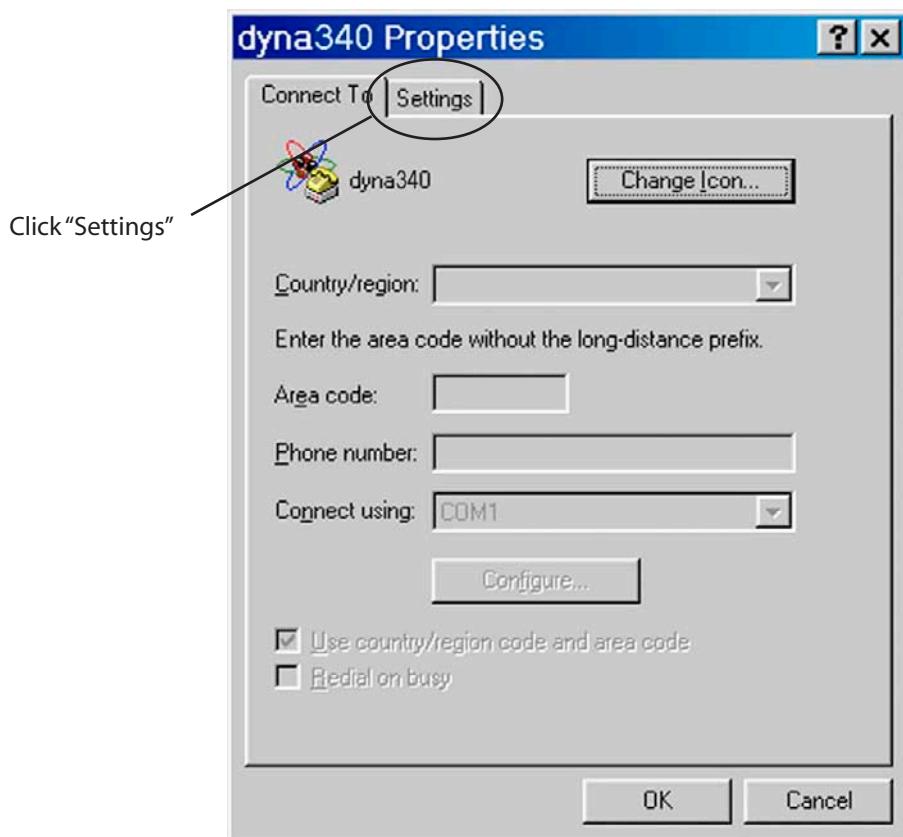

9. On the dyna340 Properties screen (above), click "Settings" to bring up the screen below.

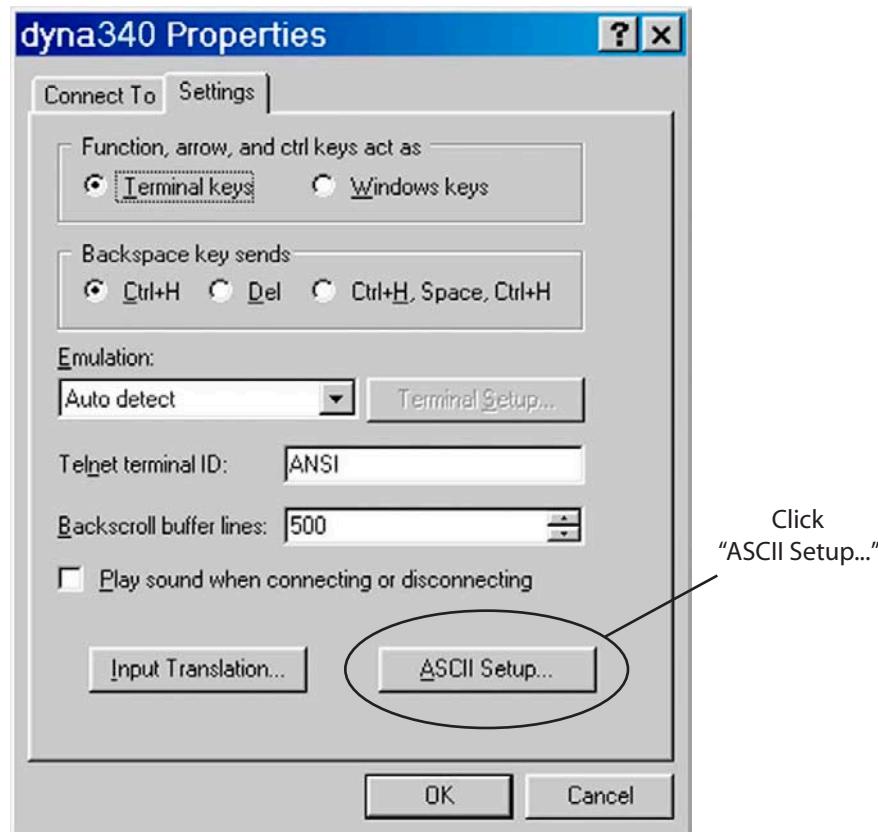

10. Click "ASCII Setup" and set the parameters as indicated below.  
Click "OK".

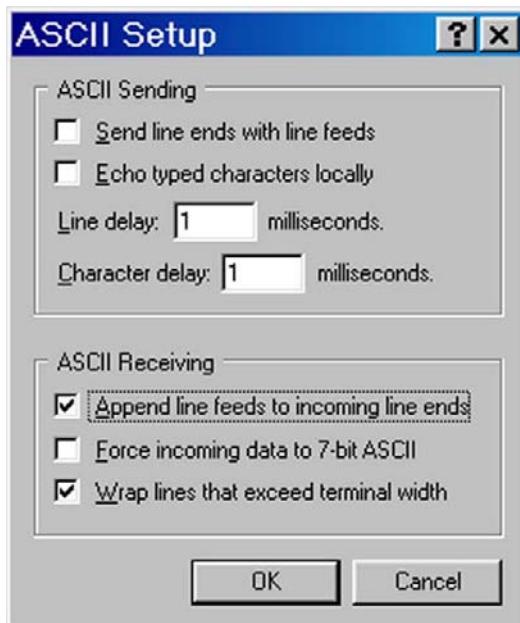

11. When the screen returns to Dyna340 HyperTerminal (page 22, bottom illustration), click "File", then "Save" to save this Dynacalibrator Model 340 communications setup.

The following text will be displayed in the HyperTerminal window when communication is first established with the Dynacalibrator Model 340:

Parameters recovered.  
Program checksums ok.  
Initializing SPI ...ok  
Initializing A/D ...ok  
Initializing IIC ...DS1624 started  
Valco Dynacalibrator online.

A simple processor test can be performed by opening HyperTerminal before powering up the Dynacalibrator. If the processor has some defects, the message "Bad checksum in Block xxx" is displayed instead of line 2 above. If this occurs, please consult VICI.

## Entering Commands

Each command must be followed by the <ENTER> key.

### Examples:

To set the chamber temperature to 50°C, type "TS=50" and press <ENTER>.

To read the set point, type "TS" and press <ENTER>.

To read the current chamber temperature, type "TR" and press <ENTER>.

To start data logging, type "L+" and press <ENTER>. To stop data logging, type "L-" and press <ENTER>.

## Analyzer Calibration

After the power-up procedure has been completed and the chamber temperature and permeation device have reached equilibrium, the Dynacalibrator is ready to be connected to the analyzer being calibrated. Use a minimum length of tubing for the connection, and make sure none of the calibrator's vents are blocked.

1. Place the Dynacalibrator in the ZERO mode.
2. Connect the calibrator's stream outlet to the input of the analyzer. Since zero air from the Model 340 is the dilution stream, the dilution flow control valve must be open. Make sure that the total flow of zero air (as indicated by the dilution flowmeter alone) exceeds the suction rate of (all) the analyzer(s) being calibrated.
3. The usual flow rate setting is the one which was calculated for the first span point. Align the center of the float in the flowmeter to the selected scale reading. Allow the analyzer reading to stabilize (usually about ten minutes) before calibrating or recording the reading.
4. Place the Dynacalibrator in the SPAN mode.
5. Adjust the dilution flow control valve for each of the pre-calculated span points, aligning the center of the float in the dilution flowmeter to the selected scale reading. Allowing the analyzer reading to stabilize after each flow adjustment.

If the Dynacalibrator will be remotely programmed with a timer-sequencer, the timer must be adjusted to allow sufficient analyzer stabilization time at the zero and at the span calibration points.

## Shutdown Procedure

Dynacalibrators are designed to operate continuously; however, if it is necessary to turn the unit off, use the following procedures:

1. Turn off the heater power switch.
2. With the tool provided, rotate the panel lock screw 90° counterclockwise.
3. Gently pull the front panel assembly out.



**CAUTION: Use specific and appropriate precaution when opening the calibrator oven. Use procedures and protective equipment to avoid contact or exposure to the permeation device and/or gas vapors while opening the chamber cap and adding/removing/changing oven content.**

4. Unscrew the chamber cap with the tool provided.
5. Add or remove the permeation device(s) with the supplied forceps or other tool appropriate to the job.
6. Secure the chamber cap with the tool provided,
7. Reinstall the front panel assembly and rotate the panel lock screw 90° clockwise.
8. Place devices in the containers provided and store them in an appropriate place until further use is required. (A refrigerator or freezer is recommended.)
9. Allow the carrier flow to purge the chamber for about five minutes
10. Switch off the main power.
11. If the unit will be left unpowered for an extended length of time, disconnect all the plumbing from the rear panel inlets and outlets and cap them.

When repowering the unit, always perform the start-up procedures starting on page 15.

## Advanced Theory of Operation

Dynacalibrator operation is based on the principle of mixing a known mass flow of gas derived from a permeation device with a metered stream of clean carrier/dilution gas to generate a precise concentration of span gas.

User-selectable calibration gases originate from Dynacal permeation devices which are maintained at a user-selectable constant temperature within the Dynacalibrator's permeation chamber. Permeation rates can be precisely determined gravimetrically as a function of temperature.


An internal flow regulating system ensures a stable gas flow over extended periods of time for both the carrier air and dilution air streams. The carrier stream continuously sweeps the permeation gas from the permeation chamber. This stream then mixes with the dilution stream to provide the final calibration as supply.

Different span gas concentrations can be generated by changing one or a combination of the following parameters: (1) the dilution stream flow rate, (2) the permeation chamber temperature, or (3) the number and/or type of permeation devices. The fastest, simplest, and most common method is to change only the dilution flow rate.

The carrier flows at a fixed rate, maintained at a constant value by a sapphire orifice plate and a differential pressure regulator. Orifice sizes are available for rates of 80-1300 cc/min.

The dilution flow is user-adjustable from approximately 100 cc/min to over 20 liters/min, depending on the capacity option selected. Model 340 Dynacalibrators contain a single dilution flow control valve and rotameter. Since the Model 340 can provide a wide dynamic range of span gas calibrations simply by changing the flow rate of the dilution gas, it is considered to be a multi-point calibrator of exceptional range, accuracy, and precision.

Each Dynacalibrator model contains basic pneumatic plumbing, with several configuration options. The plumbing configuration selected (see the simple diagram below) processes the input gas supply into a carrier stream and a dilution stream. The carrier stream picks up the calibrated trace gas and is subsequently mixed with the dilution stream for the desired output concentration.

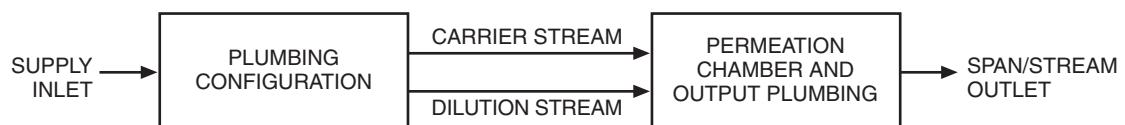

**Figure 9:** Basic block diagram

### Plumbing Configurations


There are six different plumbing configurations available for each of the Dynacalibrator models. The plumbing configuration is defined by the first digit of the 2-digit numerical suffix to the basic model number, e.g., Model 340-12 is equipped with plumbing configuration 1. The second digit of the 2-digit suffix defines the overall instrument gas flow capacity. A lower case letter is added to

this number to indicate the carrier flow (and the orifice used). Refer to page 4 for information about the available flow capacity ranges.

Many of the plumbing components of the Dynacalibrator are rated for the different flow capacities of items such as for the main pump, the dilution flowmeter, etc. The following discussion disregards these differences and describes the basic flow through the unit in relative terms.

### Configuration 0


The plumbing configuration designated "0" (**Figure 5**) consists of a single input port, an integral 5 micron filter/pressure regulator assembly, and a tee. Dry gas (air, nitrogen, etc.) at the appropriate pressure is supplied by the user to the supply inlet on the back panel. Particulates larger than 30 microns are removed by filter F1. Line regulator PR1 is set at the factory to deliver 10 psig gas to the working parts of the instruments. The output of PR1 is split by the tee into the carrier and dilution stream paths.

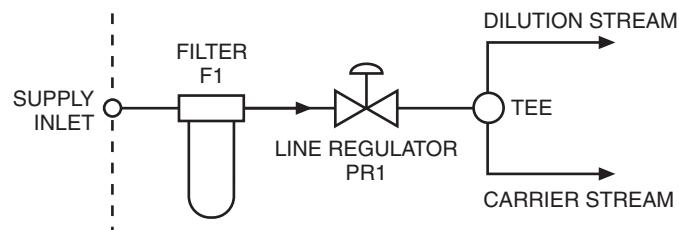

**Figure 5:** Diagram of Configuration 0

### Configuration 1


**Figure 6** shows plumbing configuration "1". Each line – carrier and dilution – contains its own input port and an integral 5-micron filter/pressure regulator assembly. User-supplied gas is filtered and regulated down to 10 psig by the factory-set line regulator for the carrier and dilution stream paths.

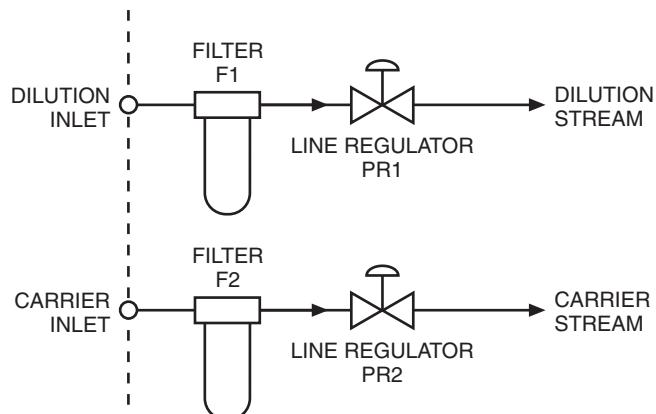

**Figure 6:** Diagram of Configuration 1

## Configuration 2

Pump P1 (**Figure 7**) draws gas in through the supply inlet on the back panel and delivers it to accumulator AC1. The accumulator smoothes out flow fluctuations generated by the pumping action and provides a port for releasing pump backpressure through pressure relief valve RV1, set at 5 psig. The output of the accumulator is passed through 5-micron filter F1, and split by the tee into carrier and dilution streams.

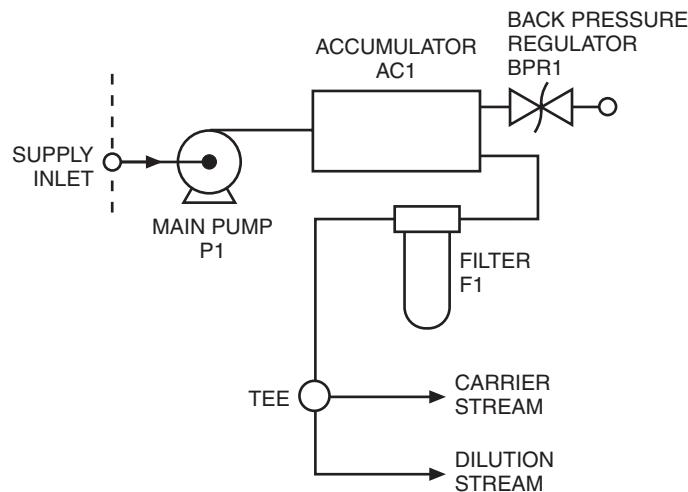


**Figure 7:** Diagram of Configuration 2

## Configuration 3


In this configuration (**Figure 8**), Pump P1 draws gas in through the supply inlet on the back panel and delivers it to accumulator AC1. The accumulator smoothes out flow fluctuations generated by the pumping action and provides a port for releasing pump backpressure through pressure relief valve RV1, set at 5 psig. The output of the accumulator is passed through filter F1, which removes particulates larger than 5 microns. The tee at the output of the filter splits the supply into carrier and dilution streams. The carrier stream is plumbed to the carrier outlet on the back panel, which must be plugged if an external carrier supply is used. This port can be connected through external scrubbing media (filters, driers, etc.) or simply looped to the carrier inlet port. Filter F2 removes particulates larger than 5 microns from the carrier stream. The dilution stream output of the tee is simply passed through F1, a 5 micron filter.

## Configuration 4

Input configuration 4 is shown in **Figure 9**. Pump P1 draws gas in through the supply inlet on the back panel and delivers it to accumulator AC1. The accumulator smoothes out flow fluctuations generated by the pumping action and provides a port for releasing pump backpressure through pressure relief valve RV1, set at 5 psig. The output of the accumulator is passed through filter F2, which removes particulates larger than 5 microns. The tee at the output of the filter splits the supply into carrier and dilution streams. The dilution stream is plumbed to the back panel dilution outlet, which must be plugged if an external dilution supply is used. This port can be connected through external scrubbing media (filters, driers, etc.) or simply looped to the dilution inlet port. Filter F1 removes particulates larger than 5 microns from the dilution stream. The carrier stream output of the tee is passed through 5-micron filter F2.

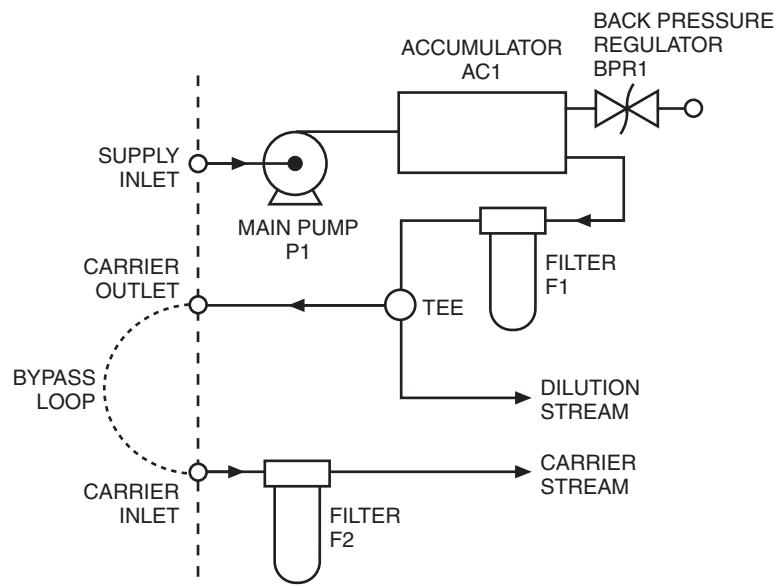


**Figure 8:** Diagram of Configuration 3

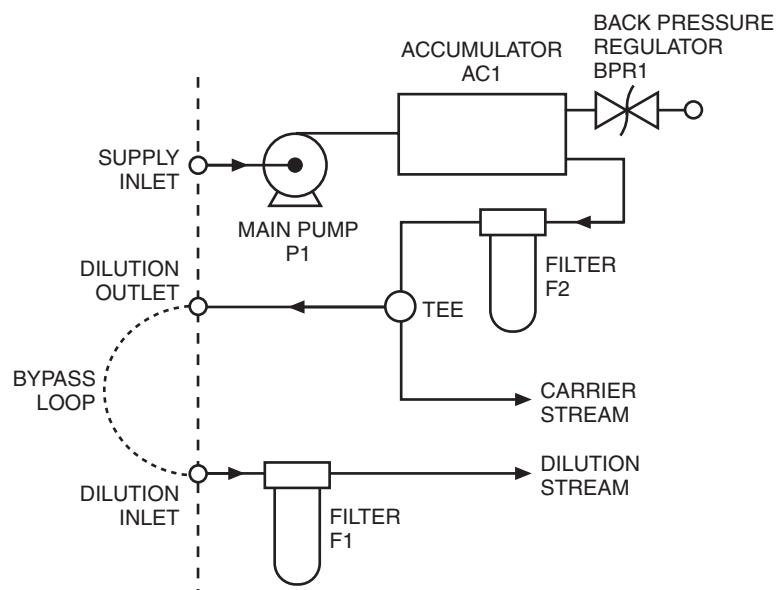

**Figure 9:** Diagram of Configuration 4

### Configuration 5

in this configuration (**Figure 10**), pump P1 draws gas in through the supply inlet on the back panel and delivers it to accumulator AC1. The accumulator smoothes out flow fluctuations generated by the pumping action and provides a port for releasing pump backpressure through pressure relief valve RV1, set at 5 psig. The tee at the output of the accumulator splits the supply into carrier and dilution streams, each of which is plumbed to a back-panel outlet port which must be plugged if an external supply is used. These ports can be connected individually through external scrubbing media (filters, driers, etc.) or simply looped to their respective inlet ports. Filters F1 and F2 remove particulates larger than 5 microns from these two streams.

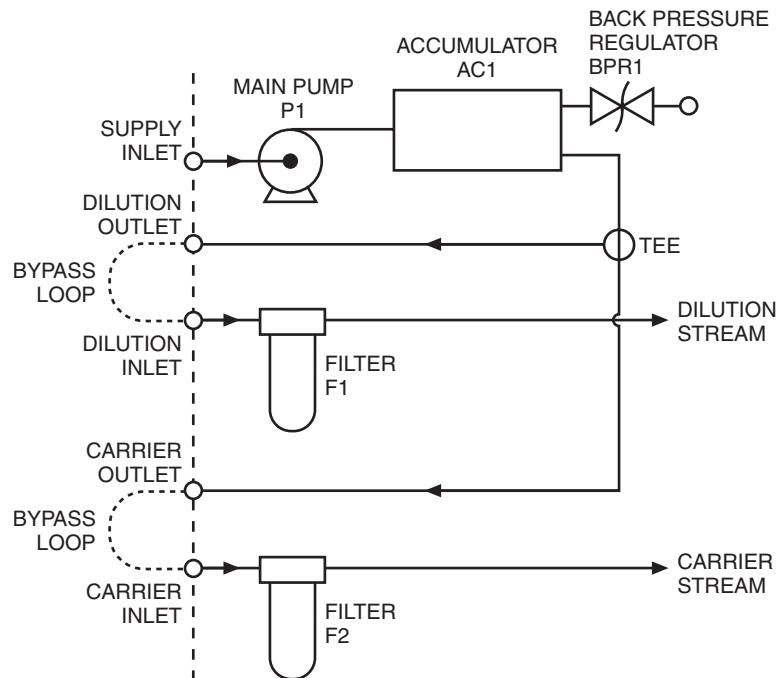


**Figure 10:** Diagram of Configuration 5

## **Electrical Description**

The basic wiring of the Model 340 is shown schematically in **Figure 11**. Dynacalibrators are powered from a benchtop style transformer on the rear panel. This is a switcher-style supply that allows a range of input voltage and frequency from 100 to 240 VAC at 50-60 Hz. The power supply steps the voltage down and regulates the output to 24 VDC. If the cord end type is inappropriate for your locale, please contact VICI for a replacement cord.

The main power switch S1 is on the front panel, along with the main circuit breaker CB1. When the main power switch is on, 24 VDC energizes the main power indicator on the front panel, as well as the fan and stream switching solenoids.

Power to the permeation chamber heater is controlled by switch S2 on the front panel. There is a separate circuit breaker CB2 and indicator for power to the permeation chamber heater.

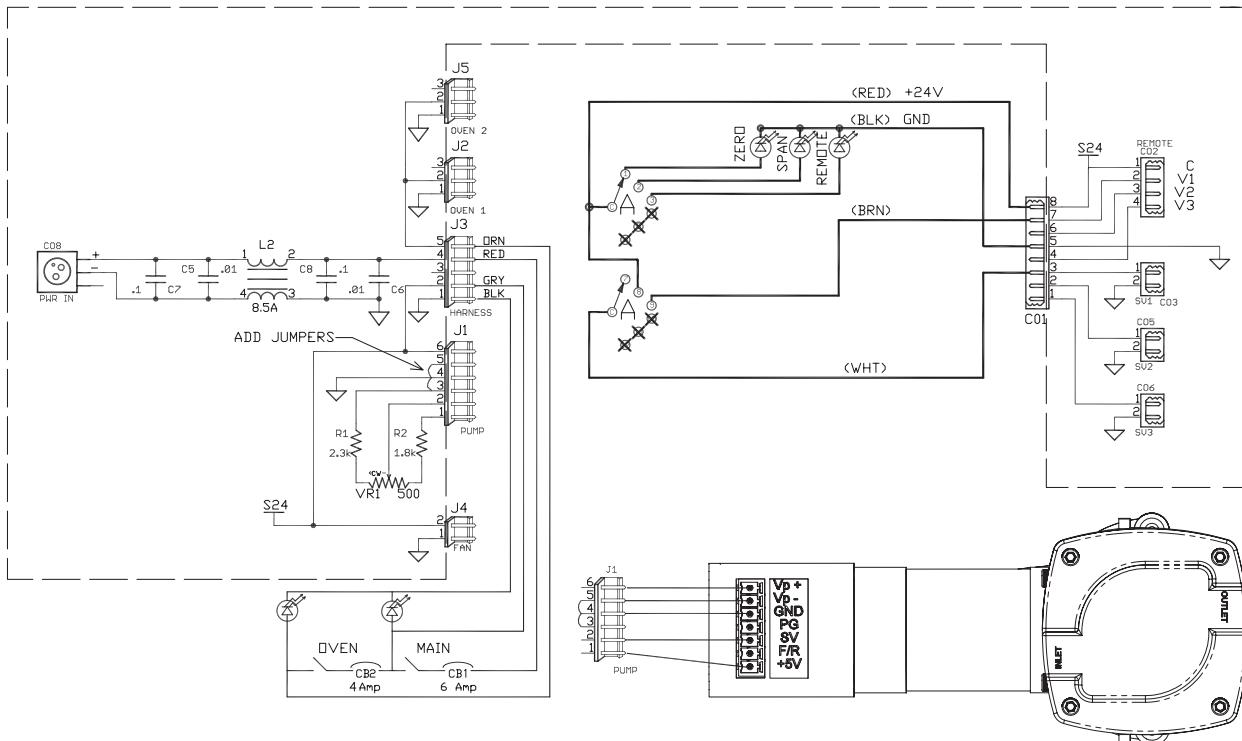

**Figure 11:** Model 340 electrical schematic

## Maintenance

---

Since the Dynacalibrators are designed for and generally used in applications that require continuous service, a planned routine maintenance program is highly recommended. Routine maintenance consists of inspection, cleaning, calibration, and leak checks. The table below lists the recommended checks and maintenance frequencies for continuous and non-continuous use. The recommendations are provided to help you keep your unit in peak operating condition and avoid catastrophic failures at inopportune times.

Use the shut-down procedures on page 26 to remove the unit from service and the initial startup procedures on page 15 to return it to service.

<b>Maintenance action</b>	<b>Recommended schedule</b>	
	<b>Continuous use</b>	<b>Periodic use</b>
Instrument inspection and cleaning	Quarterly	1000 hours
Leak check	Quarterly	1000 hours
Carrier flow rate verification	Quarterly	1000 hours
Filter inspection and cleaning	Quarterly	1000 hours
Dilution flowmeter calibration	Annually	4000 hours
Chamber temperature calibration	Annually	4000 hours

### Instrument Inspection and Cleaning

The following procedure should be performed quarterly for units in continuous service or at least after every 1000 hours of service. For the steps which call for disassembly, see the appropriate paragraph in this section.

1. Remove the unit from service according to the shut down procedures on page 36. Disconnect all power and plumbing.
2. Remove the top cover of the unit by unscrewing the six allen screws on each side of the instrument, above the side bars.
3. Snap the black fan screen off the rear and soak it in warm water with a mild detergent. Do not use a solvent.
4. Remove the four screws, hex nuts, and lockwashers that attach the fan to the rear panel. Remove the fan filter and soak it with the fan screen in warm water and a detergent.
5. Blow out the interior of the unit thoroughly with dry, low-velocity air. Remove any dirt that remains with a soft paint brush.
6. Clean the fan blades with a soft paint brush or a soft cloth dampened in the water and detergent solution.
7. Clean the exterior surfaces of the unit with a soft cloth dampened in the water and detergent solution. Do not use an abrasive.
8. Inspect all wiring for any loose connections or broken insulation.

9. Inspect all assembly mountings for loose hardware, and tighten as necessary.
10. Rinse the fan screen and fan filter in clean water and blow dry with low-velocity air.
11. Reinstall the fan, fan filter, fan screen brackets, and fan screen using the four screws, lockwashers, and hex nuts.
12. Replace the top cover of the unit and return it to service according to the procedures on page 15.

## Carrier Flow Rate Verification

The carrier flow rate is maintained at a constant value through use of a differential pressure regulator which keeps a constant 3 psi pressure drop through a sapphire orifice plate. The actual carrier flow rate of each unit is determined at the factory prior to shipment and noted on the Flowmeter Calibration Data sheet provided with each unit. The front panel carrier flowmeter provides only a relative indication of the flow; however, changes in its reading can indicate the need for flow verification. To verify the flow rate, a one liter N.I.S.T. traceable flowmeter is recommended. After using the appropriate leak checking procedures to determine that the calibrator has no leaks, proceed as follows:

1. Remove power from the unit.
2. Remove the top cover of the unit.
3. Close the dilution flow control valve(s) all the way (fully clockwise).
4. Plug the overflow vent securely.
5. Connect the flowmeter to the span outlet.
6. Connect main power to the unit and depress the main power switch. If the unit does not have an internal main pump, connect a gas source to the supply or carrier inlet.
7. Measure the flow rate to an accuracy of  $\pm 1\%$  per the instructions in the flowmeter manual.
8. Record the flow rate on the current Flowmeter Calibration Data sheet for the Dynacalibrator.

## Dilution Flowmeter Calibration

VICI recommends that Dynacalibrators be returned to the factory for N.I.S.T. traceable dilution flowmeter calibrations, unless you have access to sophisticated flow measuring equipment.

## Chamber Temperature Calibration

Prior to shipment, the permeation chamber digital temperature control is calibrated against the temperature of the gas in the permeation chamber using an NIST-traceable PRT, (platinum resistance thermometer). The results of this calibration have been supplied with your instrument.

At this point, it is helpful to give an overview of the total calibration process. A multiple point measurement is made with excursions to the extremes of range. The values logged during this process allow a calculation of correction that gives very tight agreement between the measured and the setpoint values. This calibration equation is downloaded into the control board, correcting the front panel display values to be within the tolerances of the controller.

In point of definition, measured temperatures are the equilibrium temperatures that result at specific temperature setpoints. Calibration is done by running multiple setpoints to characterize the response of the controller and oven. This characterization is then modeled and corrections are calculated based on the model response. The corrections are input and then the multiple setpoints are again run with the PRT, and must fall within the specification in order to move to final assembly. To define this process further is outside of the scope of this document and the range of work that is done by field services.

Calibration temperatures are integral Celsius temperatures ( $\pm 0.1^\circ\text{C}$ ) that will exist in the permeation chamber at specific digital settings. These temperatures are always expressed in integers, since all permeation device calibrations are performed at integral Celsius temperatures. Dynacalibrator calibration temperatures are NIST-traceable to match permeation device calibrations which are also NIST-traceable.

Recalibration of all points is normally neither required nor indicated. Recertification on an annual basis is recommended at the temperature setpoints where permeation devices will be used. Example: If an H<sub>2</sub>S permeation device is going to be used at 55°C, and a COS tube is being used at 40°C, then the recertification should be done at 2 points, 55°C and 40°C. This reduces the cost of recertification and cuts down considerably on the time required for testing.

## Troubleshooting

---

If you intend to perform detailed troubleshooting on your Dynacalibrator, please first read the section entitled "Advanced Theory of Operation" which starts on page 27. The flow diagrams included there will provide significant help. Most gas flow problems can be isolated to a particular component using a low-pressure air source and a pressure gauge.

### Electrical Troubleshooting

Since electrical components are incorporated into circuit boards, there is little that can be done by the user other than resetting tripped circuit breakers. If the breakers continue to trip, the unit must be returned to the factory for repair.



**Always completely disconnect main power from the Dynacalibrator before reaching inside the unit. Use clip-on probes installed while main power is disconnected to make all test point connections for hot checks. Reconnect power only after test connections are properly made and hands are withdrawn from inside the unit. Failure to observe this warning can result in severe electrical shock and serious injury to personnel.**

### Pneumatic Troubleshooting

There are two reasonably direct methods that can be used to troubleshoot leaks in a Dynacalibrator, each with its advantages and disadvantages. The first method, using leak detection fluid, (Leak-Tek, Snoop, soap solution, etc.) is relatively fast but is somewhat messy and requires careful cleanup after the leak is located and repaired. The second method, isolating components by breaking connections, can consume more time but does not require cleanup.

#### Leak Detection

##### Fluid Method

1. To remove the top cover, unscrew the six allen screws on each side of the instrument, above the side bars.
2. Trace out the internal plumbing loop that has been found to be leaking, starting at the point where the leak checker gauge has been connected and ending at the point where the air source has been connected. Be sure you have not overlooked any fitting, joint, or other possible point of leak in this loop. (The loop is the entire set of internal plumbing that was subjected to the leak checking charging pressure of 20 inches of water.)
3. Open the valve on the air source and slowly charge the unit until the gauge reads 20 inches of water. Close the valve on the air source..

4. Isolate the leak by using a small quantity of leak detection fluid on each possible leak point in the suspect loop. Watch carefully for the bubbling or foaming effect that characterizes a leak.



**Most leaks that arise under internal pressures of 20 inches of water will be small. Because of this, be sure to watch carefully for a full 30 seconds before concluding that the point being tested does not leak.**

5. Repeat steps 3 and 4 for each potential leak point in the suspect loop.
6. Tighten or remake any connection or joint that has been found to be leaking. Replace any component whose leak cannot be stopped by the tightening or remaking process.
7. Rerun the overall system leak checking procedure called out earlier in this section to ensure that all the leaks in the loop have been identified and repaired.
8. Using clean, lint-free rags, carefully wipe up any residual leak detection fluid from the interior of the Dynacalibrator cabinet.

#### Component Isolation Method

1. To remove the top cover, unscrew the six allen screws on each side of the instrument, above the side bars.
2. Trace out the internal plumbing loop that has been found to be leaking, starting at the point where the leak checker gauge has been connected and ending at the point where the air source has been connected. Be sure you have not overlooked any fitting, joint, or other possible point of leak in this loop. (The loop is the entire set of internal plumbing that was subjected to the leak checking charging pressure of 20 inches of water.)
3. Starting at the air source end of the suspect loop, break a fitting and, using an appropriate adapter, connect the leak checker gauge to the upstream side of the disconnected joint.
4. Open the valve on the air source and slowly charge the unit until the gauge reads 20 inches of water. Close the valve on the air source.
5. Monitor the gauge for at least 30 seconds. If the reading does not change, there are no leaks in this path to this point. Proceed to Step 7. If the reading drops, then a leak between the air source and the leak checker gauge can be inferred.
6. Tighten or remake any connection or joint that is upstream of the leak checker gauge. Repeat steps 4, 5, and 6 until no further leaks are indicated, then proceed to step 7.

7. Once a section of the loop has been determined to be leak free, go to the next fitting downstream of the point of the previous check and repeat the previous procedure starting at step 3 above. When the end of the loop has been reached by the previous sequential troubleshooting procedure, this check can be considered completed. For reference, the end of the loop is the point where, in the initial leak checking procedure, the Leak Checker gauge was placed.
8. Once the task has been completed and all leaks eliminated, close the instrument up and return it to use.

### Other Pneumatic Issues

Three other general categories of problems (aside from leaks) are occasionally encountered in the pneumatic system in the Dynacalibrator. In order of likelihood they are:

#### *Main pump diaphragm(s) worn out*


These elastomeric diaphragms are rated for more than 10,000 hours continuous operation at the output pressure used in the Dynacalibrator; however, they must occasionally be replaced.

#### *Line filter(s) clogged*

This problem tends to occur whenever the air or gas being drawn into the Dynacalibrator has a heavy particulate loading (dust). To see if the filter is clogged, unscrew the filter bowl, remove the filter cartridge, and replace the bowl. If this eliminates the problem, then the filter needs cleaning. To clean a filter, follow the directions in the maintenance section.

## Model Number Breakdown

### Model

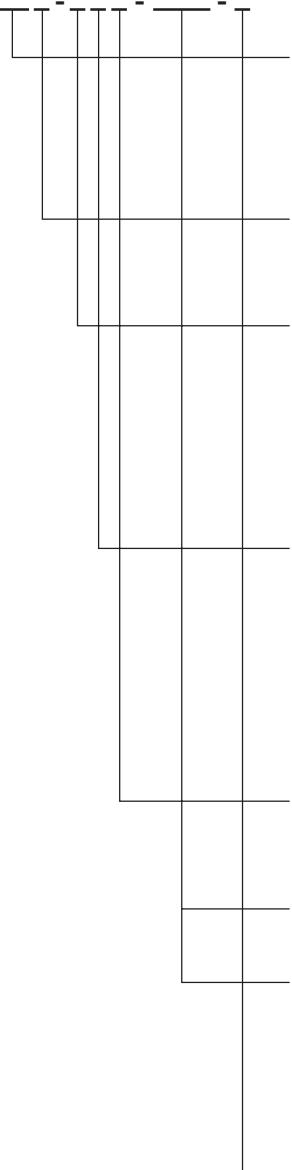

#### Base Model

- 23 - Basic gas generator, continuous supply
- 34 - Intermediate generator, with zero and span functions
- 45 - Multiple modes, with zero, span, and bypass functions
- 50 - Two chambers (A and B), with selector for zero, A, B, or A+B

#### Flow Control and Metering Methods

- 0 - Manual/pneumatic control, mechanical/pneumatic metering
- 5 - Electronic control, digital numeric metering

#### Basic Plumbing Configuration

- 0 - No pump, single gas supply inlet
- 1 - No pump, dual gas supply inlets (carrier & dilution)
- 2 - Internal pump, no gas stream bypasses<sup>1</sup>
- 3 - Internal pump, single gas stream bypass (carrier)<sup>1</sup>
- 4 - Internal pump, single gas stream bypass (dilution)<sup>1</sup>
- 5 - Internal pump, dual gas stream bypasses (carrier & dilution)<sup>1</sup>

#### Dilution Gas Flow Capacity

- 3 - 1 L/min
- 4 - 2 L/min
- 5 - 5 L/min
- 6 - 10 L/min
- 7 - 15 L/min
- 8 - 20 L/min
- 9 - special flow

#### Carrier Gas Flow Capacity

- A - 80 cc/min
- B - 175 cc/min

#### Rack Mount

- R - Slide-mount package with pull handles (19")

#### Additional Options

- C - 220V/50Hz operation
- D - Flowmeter with fully calibrated dual floats; second float gives full scale reading at ~30% capacity<sup>2</sup>
- M - Constructed for use with moisture and moisture-sensitive compounds<sup>3</sup>
- S - Any non-standard option (contact factory for quote)

#### Chamber Material

- I - 150 Inertium
- N - HC-276 (for HCl, HF, and Cl)

<sup>1</sup> Internal pump not available on Model 500/505, or on any model constructed for use with moisture (Option M)

<sup>2</sup> Available only on models with manual/pneumatic flow control

<sup>3</sup> Available only on models with electronic flow control

### Accessories

Name	Description	Product No.
<b>PFA</b>	Low-pressure-drop particulate filter assembly for Dynacalibrators with an internal pump which will be operated in dusty environments	50-02-102
<b>FC</b>	Replacement filter cartridge for PFA	07-10-016
<b>CSU</b>	Replacement charcoal scrubber unit	50-02-041
<b>PD</b>	Replacement pump diaphragm	07-05-001
<b>LF</b>	Replacement 5 micron line filter element, with gaskets	07-13-005

## Warranty

This Limited Warranty gives the Buyer specific legal rights, and a Buyer may also have other rights that vary from state to state. For a period of 90 calendar days from the date of shipment, VICI Metronics Inc. (hereinafter Seller) warrants the goods to be free from defect in material and workmanship to the original purchaser. During the warranty period, Seller agrees to repair or replace at Seller's option defective and/or nonconforming goods or parts (exclusions noted below) without charge for material or labor, subject to inspection FOB VICI Metronics Inc. factory. Buyer's exclusive remedy is repair or replacement of defective and nonconforming goods.

***Seller excludes and disclaims any liability for lost profits, personal injury, interruption of service, or for consequential incidental or special damages arising out of, resulting from, or relating in any manner to these goods***

This Limited Warranty does not cover:

- lamps or fuses
- damage due to improper shipping
- damage due to improper use
- damage due to modifications or alterations
- damage due to improper maintenance.

This Limited Warranty does not cover defects, damage, or nonconformity resulting from abuse, misuse, neglect, lack of reasonable care, modification, or the attachment of improper devices to the goods. This Limited Warranty does not cover expendable items. This warranty is VOID when repairs are performed by a nonauthorized service center or representative.

***The warranties contained in this agreement are in lieu of all other warranties expressed or implied, including the warranties of merchantability and fitness for a particular purpose.***

This Limited Warranty supercedes all prior proposals or representations oral or written and constitutes the entire understanding regarding the warranties made by Seller to Buyer. This Limited Warranty may not be expanded or modified except in writing signed by the parties hereto.